


KICKSTOPS®

INSTALLATION INSTRUCTIONS

HAND PLACEMENT



Place one hand on the upper or lower handle and place other hand on the slide hammer.

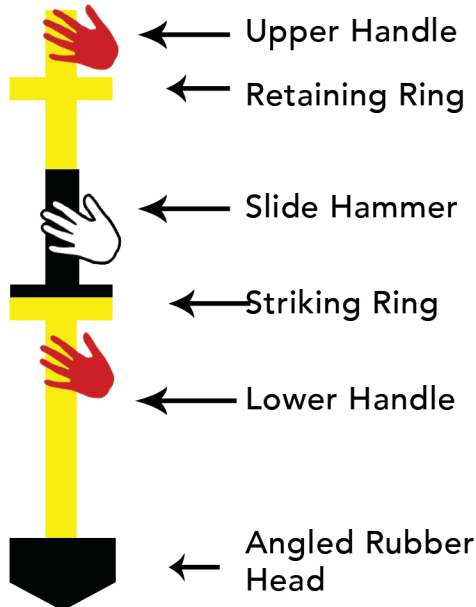


INCORRECT


Do not place hand below retaining ring and above slide hammer.

OR

Above striking ring and below slide hammer.

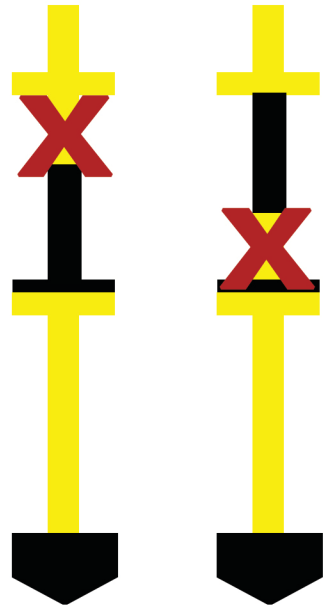

DEVICE PLACEMENT

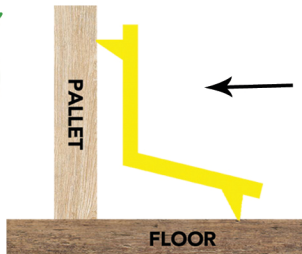


*The upper face of the device **MUST** be parallel to side of the pallet for installation. If the upper face is at an angle to the pallet, the device will be compromised and will not work.



INSTALLATION

1. Place device against pallet with hand or use the magnetic head on tool.
2. Place one hand on the upper or lower handle and one hand on the slide hammer.
3. Place tool rubber head into the angle of the device.
4. In one motion, pull slide hammer up and apply force down into the striking ring.
5. Repeat on remaining devices and check to confirm they set.

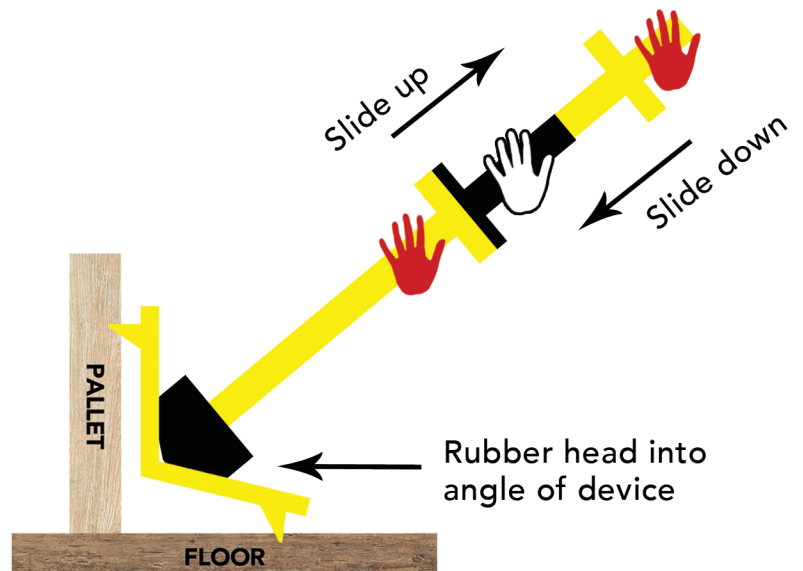

Made In USA PAT. 9,868,383

KICK STOPS® Cargo Restraint Device is a Registered Trademark of CDCE Engineered Solutions.